## 125K-R-USB-KB-W1(Ivory)

# 125K Read only RFID Reader with USB keyboard interface (Wall mount / waterproof design)

#### **FEATURES:**

- Built-in bi-color LED and buzzer
- Built-in transceiver antenna
- support USB 1.1 or USB2.0
- Read card unique serial No
- power by USB interface and no external power is needed
- USB Keyboard emulation interface (read card ID as keyboard input)
- Reading distance: ISO card (~5-8cm) / Key fob (~3-5cm)
- Support EM4100 or compatible 125Khz read only tags
- No driver is needed under windows platform
- Size: (117x75x15) mm / with 1 meter USB type A plug

#### **Data output format**

40 11 11 (1 1 1)		
10 digit (decimal) card ID	CR	LF

### Installation Guide

Connect the RFID reader to PC USB port with the USB cable.

Then the PC will detect the RFID reader automatically and install it as a HID device .

After installation successfully, open "Excel" or other application program to read the RFID tag and the ID

will be shown as follow:

	A1	= 0002
	A	В
1	0002999881	
2	0003444324	
3	0000703855	
4	0008972062	
5	0001492454	
6	0001519333	
7	0001533595	
8	0001533707	
9	0001463980	

Excel Format Input Example



Front Side View



Back Side View